

*how  
to use  
your*

**BROWNIE** *Flashholder*

**KODAK (Australasia) PTY. LTD.**

## TAKING FLASH PICTURES

Use only a capless flashbulb such as a G.E.C. No. 1 or No. 5, or a PF No. 1 or No. 5. Push the bulb in firmly without attempting to twist it; its copper wires will automatically connect up with the correct metal strips inside the Flashholder.


Stand at the correct distance for the type of film in use, as indicated on the back of your Flashholder. Full details are given in your camera instructions. Pressing the exposure button on your camera automatically fires the flashbulb at the right instant.

## FITTING THE BATTERIES

Undo the knurled locking screw on the back of the Flashholder and lift off the metal cover. Insert two 915 Size AA EVEREADY or similar batteries, both with base down. The tape within the body should be underneath the batteries, so that when these are exhausted they can be removed by pulling the end of the tape. Replace the metal cover and secure it by tightening the knurled locking screw.




## FITTING THE FLASHHOLDER TO THE CAMERA

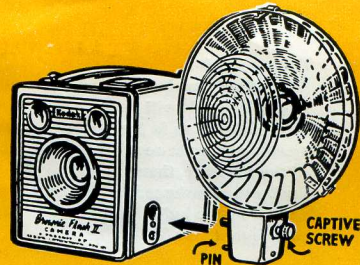

Do not insert flashbulb until Flashholder has been attached to camera. Set the shutter on the camera to "I". This Flashholder is for use with cameras having the 'screw and pin' fitting illustrated.


Insert the pin on the Flashholder into the lower of the two holes on the camera, then screw the captive screw into the upper hole on the camera. Electrical connections are made automatically.

*This picture shows the Brownie Flashholder fitted to the Brownie Flash II Camera, but it is suitable for all cameras with 'screw and pin' fitting. Available separately is a special Kodak Adapter which enables the Brownie Flashholder to be used with Kodak Retina Cameras.*

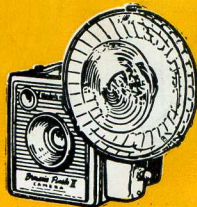


## REMOVING FIRED FLASHBULBS

Do not touch a newly-fired flashbulb immediately. It will be too hot. Push in the ejector pin at the rear of the reflector, then unclip the Flashguard and allow the bulb to drop out.

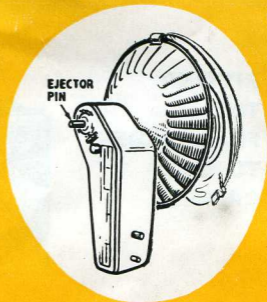

Occasionally a flashbulb may shatter when fired. To guard against this contingency, the diffusing screen must always be securely closed before using the equipment.

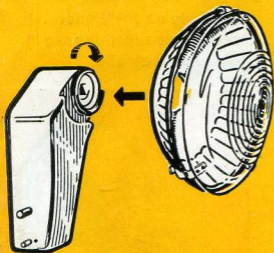

## REMOVING THE REFLECTOR

The Brownie Flashholder should always be used with the reflector and flashguard attached to the Flashholder. They can, however, be removed for storage or carrying by giving the reflector a quarter turn anti-clockwise. The method of replacing is illustrated at the left.